



About this Manual

This is the manual for your Trip computer.
Check for updates at bontrager.com.


Welcome.




Safety
When riding your bicycle, do not stare at the computer for a long time. If you do not watch the road, you could hit an obstacle, which might cause you to lose control and fall.




Mount Computer

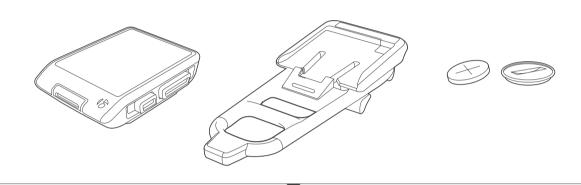

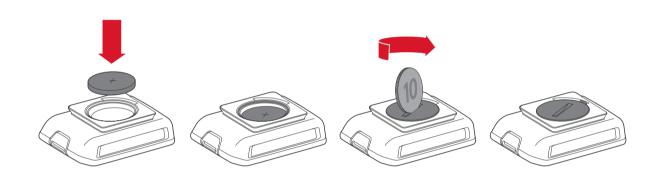




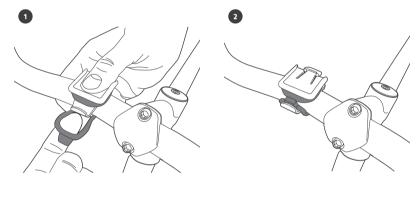



ø 22.2mm–27.2mm



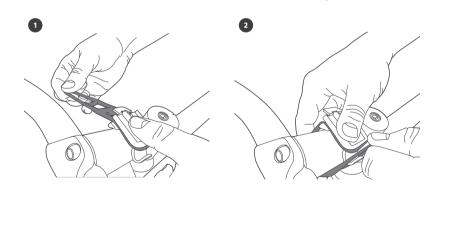


Mount Sensor

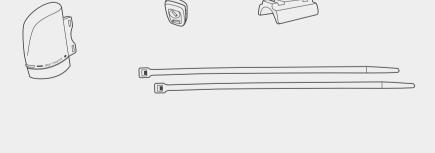


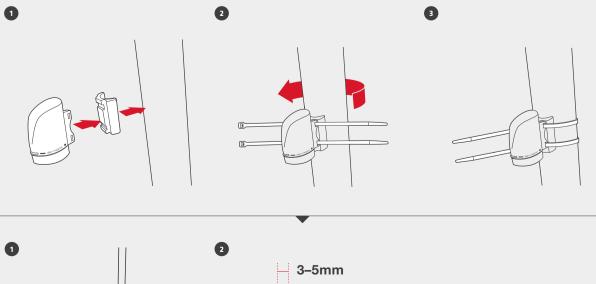

Understanding the Instructions

The numbers indicate the order in which to push the buttons. More than one arrow means you should push the button until you see the value you want.

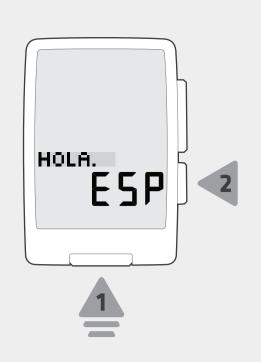

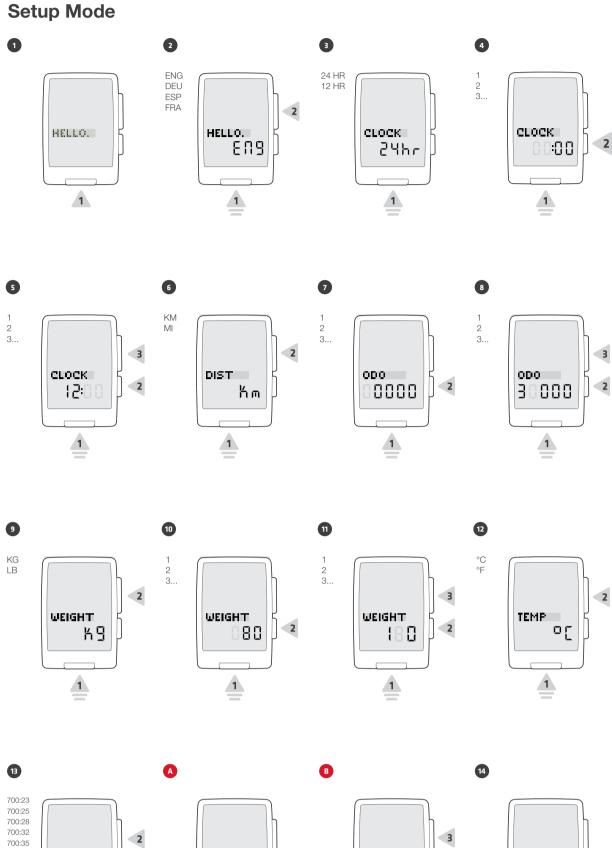

Ride Mode

WHEEL

100:23

1

700:38

29:2.1

29:2.2

26:1.5 26:1.9 26:2.0 26:2.1

26:2.2 26:2.3

 Wake the computer: push any button or spin the wheel.

WHEEL

096

1



Speed functions



CURRENT

average speed)

Pacer (faster or slower than your



Quickview (Displays clock for 3 seconds)



2 YES (starts a new ride and erases trip memory) NO (leaves trip memory intact so

WHEEL

2096

1

the computer records as a continuing ride)

DOME

1



Secondary functions CLOCK (time of day)



Backlight (Trip 200 only)



Low battery

Additional



Switch to Setup mode

