



GoTime

Basic Instructions

About this manual

Please read this manual carefully. If you do not understand the information, or you have a question that this manual does not cover, consult your Bontrager dealer or download the complete instruction manual from www.bontrager.com/support/owners_manuals.

Contents

Safety	2
Getting started	
Process overview.....	3
Tools required.....	3
Parts list.....	3
Installing your GoTime	
To install the speed sensor & wheel magnet.....	4
To insert the battery.....	5
To set-up your preferences.....	6
To attach the computer.....	10
Using your GoTime	
Viewing the screens.....	12
Starting your ride.....	12

Changing the set-up	
To re-set the tire size.....	14
To re-set the odometer.....	16
To re-set the time.....	18
To re-set all data and settings.....	20
Custom tire size	
To measure rollout.....	23
To set-up a custom tire size.....	24

⚠ Safety

When riding your bicycle, do not stare at the computer for a long time (Figure 1). If you do not watch the road, you could hit an obstacle, which might cause you to lose control and fall.

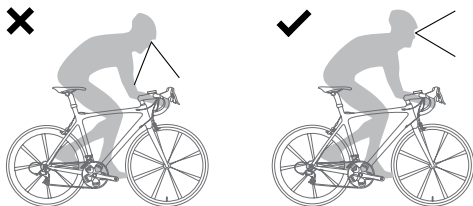


Figure 1. Do not stare at computer for long periods of time.

Getting started: process overview

Getting your GoTime up and running is easy and takes only about 10 minutes. However, it will help you through the process if you take the time to completely read this manual before you start. For example, you cannot complete the setup process (#3 below) if the sensor cannot read the magnet in the wheel (#1).

Here are the steps in the process:


- 1 - Install the speed sensor and wheel magnet.
- 2 - Install the battery in the computer.
- 3 - Setup your preferences for time, miles, etc.
- 4 - Install the computer on the handlebar.

Tools required

Screwdriver, small slot type


Parts list

- A Speed sensor
- B Spoke magnet
- C Battery cover
- D Battery
- E Large strap
- F Small strap

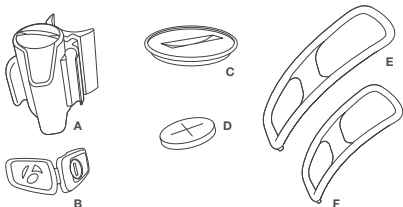

Installing your GoTime


To install the speed sensor and wheel magnet

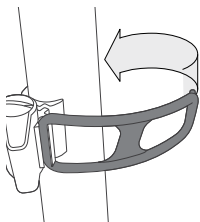


1.




2.

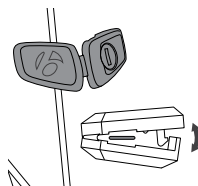


3.

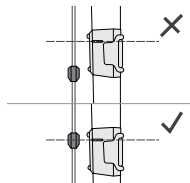

4.

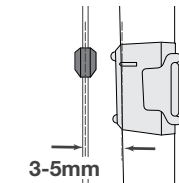


5.

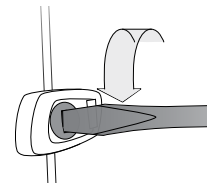


6.

To insert the battery


To increase battery life, the GoTime is shipped with the battery NOT INSTALLED. Before proceeding with the setup, you must install the battery.

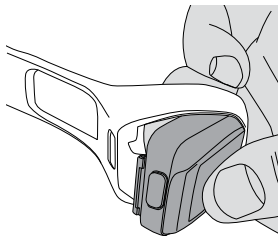

1.

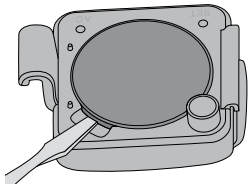

2.

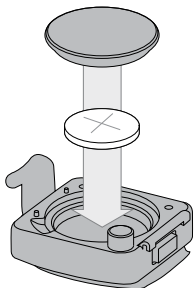

3.

After you install the battery, do not place the computer back into the band because you will need access to the SET button on the back of the computer. Instead, follow the set-up procedure, which starts automatically when you install the battery. The instructions start on the next page.

To set up your preferences

After you install the battery, the Setup procedure starts automatically. Place the GoTime within 27" (70 cm) of the sensor, and be ready to activate the sensor as explained in the next section.

You can begin the Setup procedure without re-installing the battery. See "To re-set all data and settings," page 20.


1. To change units (choose kmh or mph), press **M**.
To save and proceed to the Tire Size screen, press **SET**.
2. To change the tire size, press **M**. Repeat until your preferred tire size appears.
You can also set a custom tire size; see Setting a Custom Tire Size, page 11.

Tire size menu


26 x 1.9	700 x 23	700 x 32	29 x 2.1
26 x 2.0	700 x 25	700 x 35	29 x 2.3
26 x 2.1	700 x 28	700 x 38	Custom
26 x 2.2			

3. To save and proceed to the clock screen, press **SET**.


4. To change the Clock Type (choose 12 or 24 hour), press **M**.
To save and proceed to the Hours screen, press **SET**.

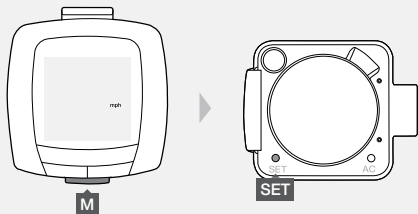


1.

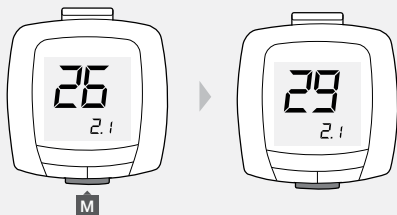

2.

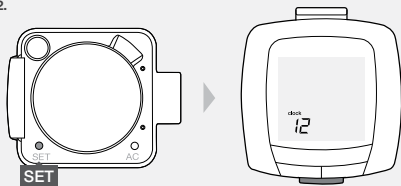

3.

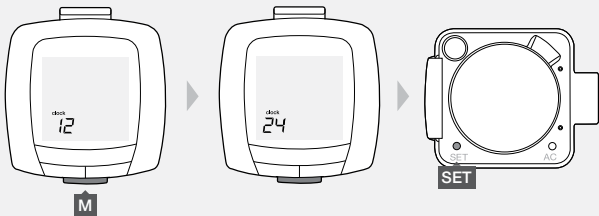




4.

5. To change the hours, press **M**. To scroll faster, hold **M**.
To save and proceed to the Minutes screen, press **SET**.

6. To change the minutes, press **M**. To scroll faster, hold **M**.
To save and exit the programming mode, press **SET**.


The Ride screen appears with Speed/Clock mode.

7. Carefully insert the computer back into its band, and follow the steps on the next page.

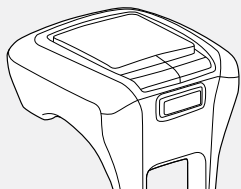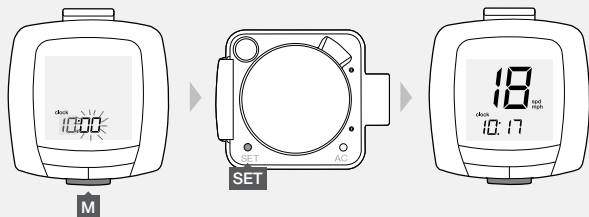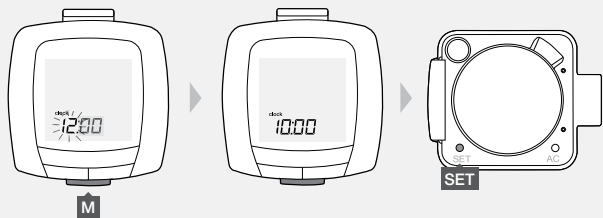


To attach the computer


You can attach the computer to the handlebar (only). Consider your preference for left and right, and your access to the button on the computer.

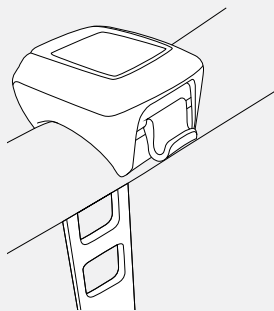

1.

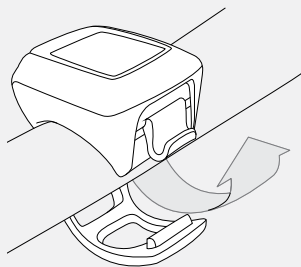

2.

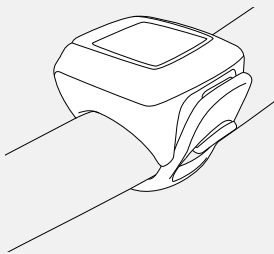

3.

Using your GoTime

This section gives you the information you need to enjoy your ride: how to see the modes of the GoTime, and how to start your ride.

Viewing the screens

These steps start with Speed/Clock mode, which is what you see after completing the Setup Procedure. However, you can start on any step shown here. Note that speed always displays.

To change a screen, press **M** :

Clock > *This is the time of day.*

Timer > *This is the amount of time you have been riding after you last restarted the trip data. The timer starts when the wheel turns.*

Trip distance > *This is the distance you have ridden after you last restarted the trip data, displayed to the tenth.*


Odometer > *This is the distance you have ridden since you last re-set the computer by performing the set-up procedure, rounded to whole miles or kilometers.*

Average speed > *This is your average speed during this trip.*

Starting Your Ride

Before a ride, you may want to set your trip information to zero (0). This is called a 'restart.' The trip information includes trip distance, elapsed time, and average speed.

1. In any screen, hold **M** for two seconds.

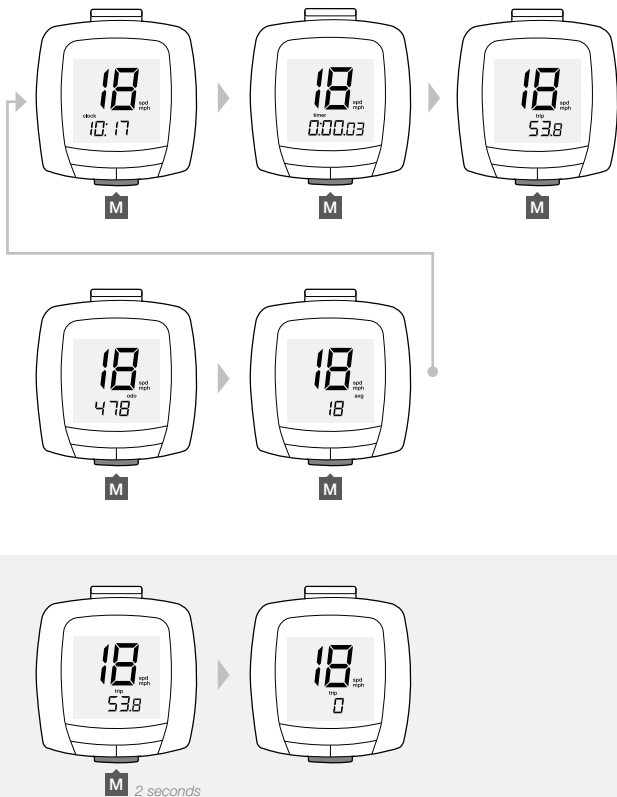

Changing the setup

This section tells you how to change individual items in the set-up without doing a complete re-set, which erases all settings.


To set-up values on the computer, you must remove it from its band.

To re-set the tire size



1. Browse **M** to the trip screen.
2. Press **SET**.
The units (mph or kph) appear.
3. To change units (choose kmh or mph), press **M**.
To save and proceed to the tire size screen, press **SET**.
4. To change the tire size, press **M**. Repeat until your preferred size appears.
You can also set a custom tire size; see Setting a Custom Tire Size, page 11.
To save, press **SET**.
After you save your changes, the GoTime switches to ride mode and the trip screen appears.




1.

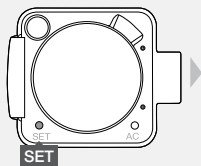


2.

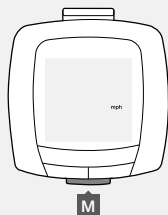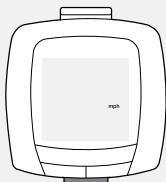

3.

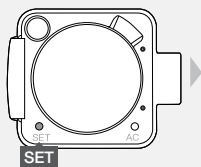

4.

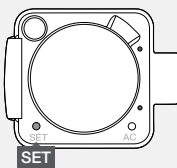


To re-set the odometer

1. Browse **M** to the odometer screen.
2. Press **SET**.
The total distance appears with the first digit flashing.

3. Press **M** to change the first value.
Press **SET** to select and move to the next digit.

4. Repeat step 3 for the other digits.
After you save your changes, the GoTime switches to ride mode and the odometer screen appears.

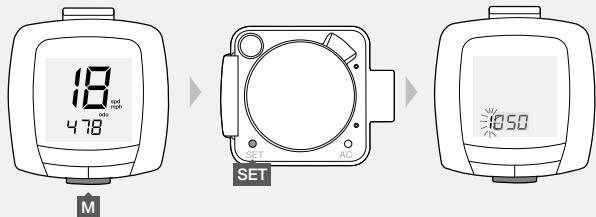


1.

2.



3.

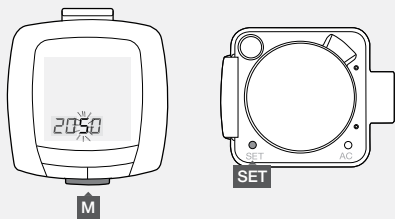

4.

To re-set the time


1. Browse **M** to the clock screen.
2. Press **SET**.
The clock type (12 or 24) appears.

3. To change the clock type (choose 12 or 24 hour), press **M**.
To save and proceed to the hours screen, press **SET**.


4. To change the hours, press **M**.
To scroll faster, hold M for a few moments.
To save and proceed to the minutes screen, press **SET**.




1.

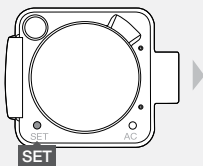


2.

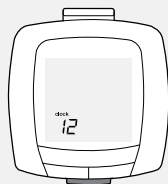

3.

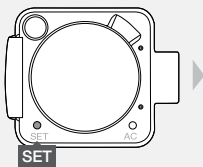

4.

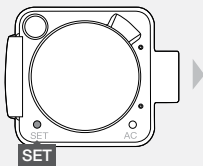

5. To change the minutes, press **M**.

To scroll faster, hold **M** for a few moments.

To save and exit the set-up procedure, press **SET**.


After you save your changes, the GoTime switches to ride mode and the clock screen appears.

To re-set all data and settings


A Re-set of the computer erases all data and settings. Before you do a re-set, you may want to write down your odometer total.

1. Remove the computer from its band.
2. Press the **AC** button (Figure 2).

The 'mph' screen appears and you can start the procedure To Set-up Your Preferences, page 3.

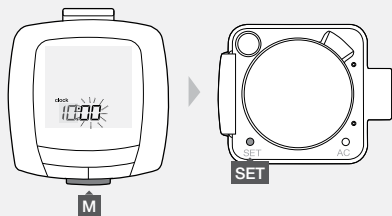

5.

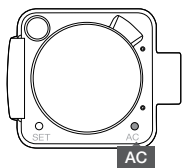

Setting a custom tire size

To setup a custom wheel size, use the Tire Size chart or measure the bike's rollout (the distance the bike travels in exactly one revolution of the wheel). Then setup the computer.


Tire size Code


12 x 1.75	935	24 x 2.125	1965	700 x 20	2086
14 x 1.75	1020	26 x 7/8	1920	700 x 23	2096
16 x 1.5	1185	26 x 1	1913	700 x 25	2105
16 x 1.75	1195	26 x 1.25	1953	700 x 28	2136
18 x 1.5	1340	26 x 13/8	2068	700 x 32	2155
18 x 1.75	1350	26 x 1.5	2010	700 x 35	2168
20 x 1.75	1515	26 x 1.75	2023	700 x 38	2180
20 x 13/8	1615	26 x 1.95	2050	700 x 40	2200
22 x 13/8	1770	26 x 2.0	2055	27 x 1	2145
24 x 1	1753	26 x 2.125	2070	27 x 11/8	2155
24 x 11/8	1795	26 x 2.2	2075	27 x 11/4	2161
24 x 11/4	1905	26 x 2.35	2083	27 x 13/8	2169
24 x 1.75	1890	26 x 3	2170	29 x 2.1	2288
24 x 2	1825	650 x 23	1930	29 x 2.3	2326

To measure rollout


Tools required: helper, pen, and measuring tape

- + With the valve stem of the wheel directly over the floor, sit on the bike.
- + Have your helper mark the floor at the valve stem.
- + Roll the bike forward one revolution of the wheel, so that the valve stem is again directly over the floor.
- + Mark the new location of the valve stem.
- + Measure the distance between the marks. If needed, convert to millimeters. The result is your custom wheel size. Go to the next page to program the GoTime with your wheel size.

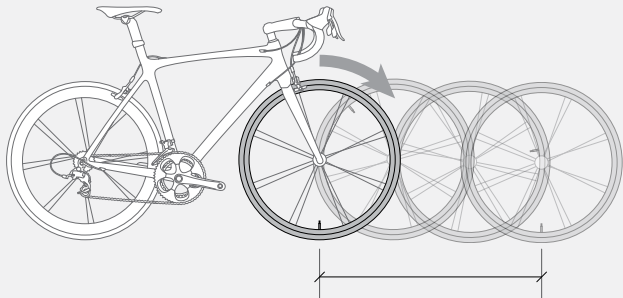


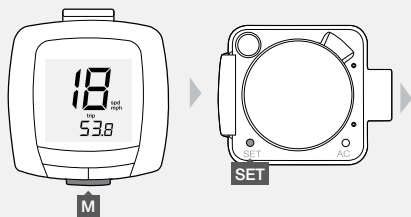

2.

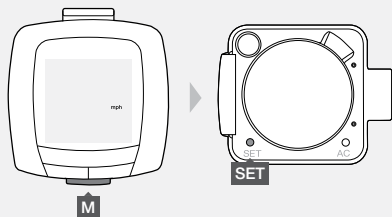

3.

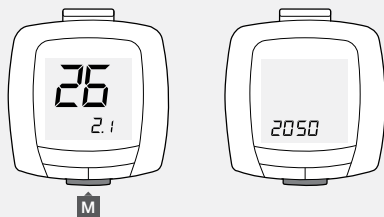

4.

5. To select the four-digit code (so that you can change it), press **SET**.


The first digit of the code flashes.

6. To change the value, press **M**. To scroll faster, hold **M**.

To save and proceed to the next digit, press **SET**.

7. Repeat step 6 for the other three digits of the code.

After you save the last digit, the GoTime switches to ride mode and the trip screen appears.

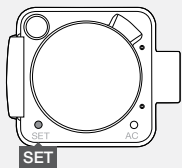

5.



6.



7.



bontrager.com

Bontrager & Bontrager B-Dot are registered trademarks of Trek Bicycle Corporation.
©2011 Trek Bicycle Corporation, Waterloo, Wisconsin 53594 USA. All rights reserved.

